


GROUND PROTECTION MATS

INSTALL IN 5 EASY STEPS:

- 1** Place the floor grid panels down so that the flat surface of the 2-inch x 24-inch center band is facing up. The bottom side of the floor grid panel has four molded-in locator buttons on one end.
- 2** The floor grid panels are easily laid down and connected in a running row and/or column pattern.
- 3** Lay the floor grid panels in a pattern you desire. Be sure that all interlocking floor grid panels line up correctly (right side up).
- 4** Snap the 2-foot ends together to engage the locator buttons.
- 5** Zip-tie the panels together to create a secure connection.

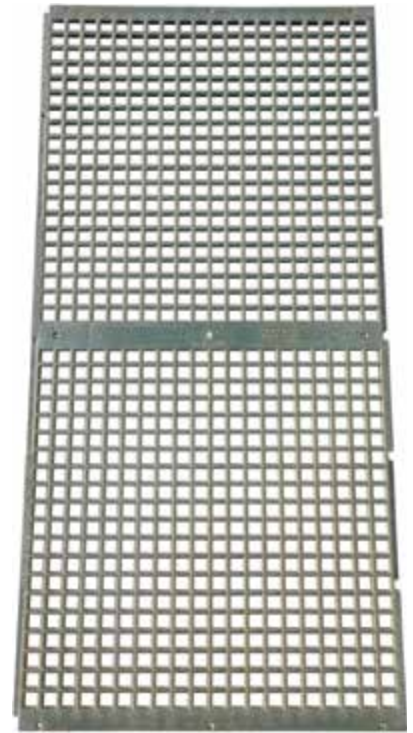

ABOVE: 2-FOOT X 4-FOOT FLOOR GRID PANEL

MATERIALS INCLUDED IN KIT:

- (3) 2-foot x 4-foot grid panels

OTHER MATERIALS NEEDED:

- Zip ties or other connection device(s) to secure panels



FOR MORE INFORMATION, VISIT
www.yardfullyproducts.com



Yardfully@ReynoldsBrands.com
1-800-354-7572

©2020 Yardfully®. All Rights Reserved.
Yardfully® is a registered trademark of Reynolds Presto Products Inc.
ZR0500620 R1 Nov2023