


UTILITY MATS

INSTALL IN 3 EASY STEPS:

Assembly Guide

Yardfully utility mats are strong, yet lightweight units joined together with a bolt-tight system to form larger mats sized to meet your specific application requirements.

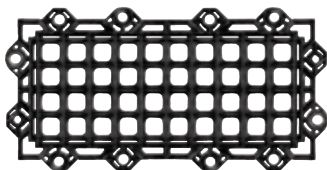

Utility mats are assembled in place by connecting individual units and securing the tabbed connections with bolts.

A total of twelve tabbed connection points are provided on each unit. There are four tabs on the long side of each unit and two tabs on the short side.

Each unit contains integral nuts for securing connector bolts.

Bolts can be easily removed and the mat system can be disassembled for removal, storage and reuse.



MATERIALS INCLUDED:

- (4) 17½-inch by 36½-inch utility mats
- (16) Polymer bolts

RECOMMENDED TOOLS:

- Adjustable wrench, or
- Channel-lock pliers, or
- 5/16-inch Allen (hex) key

1

Prepare the location

- Clear large objects such as rocks, sticks, etc. from flat, level ground.
- Lay individual units on the cleared ground, forming the desired mat size.



2

Assemble in place

- Slide the units together so the tabs on the adjacent mats overlap and the bolt holes are aligned.



3

Secure with bolts

- Insert the plastic bolts and tighten. Bolts can be installed by hand, and tightened as necessary using an adjustable wrench, channel-lock pliers, or 5/16-inch Allen (hex) key.

